

Scientific Atlanta D9850 and D9852 Setup to receive Outdoor Channel SD & HD programming via the ASI output (supplement to initial setup guides)

Outdoor Channel Standard and High Definition channels are accessible via the 'ASI out' port on the rear of the D9850 or D9852 receiver. The ASI transport stream will be present here, provided you perform the following steps to enable the port:



1) From the D9850/D9852 main menu, arrow right to 'Setup'. Hit 'select' button


2) Arrow right to 'TxOut'. Hit 'select' button

3) Hit 'select' to choose filter mode. Then, arrow down so that 'Service Channel Descrambled' is displayed in brackets. Hit 'select'.

4) select 'menu' again to save and return to the status screen

You can now pass the descrambled ASI transport stream to your in-house equipment!

note- for programming PID and other signal information see 'Digital Parameters sheet'

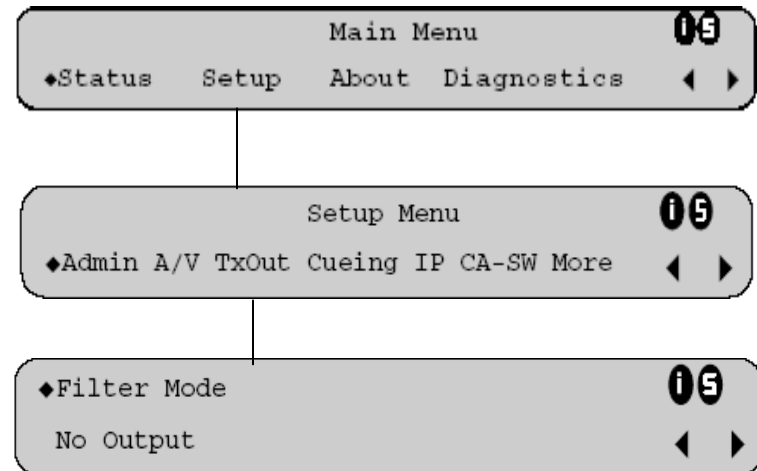

**For Technical Support call:
Scientific Atlanta
1-888-949-4786 option 2
Outdoor Channel
1-800-770-5750 ext 303**